


**Newton4th Ltd**

PPA500/1500

Start Up Guide

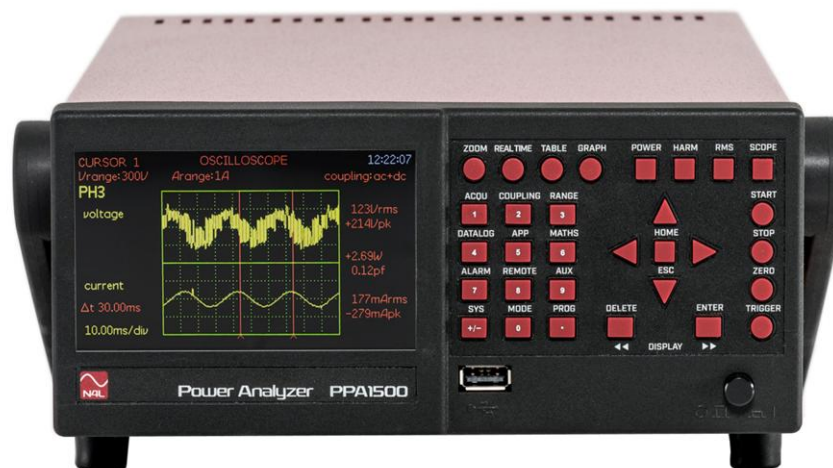

This manual is copyright © 2006-2021 Newton4th Ltd. and all rights are reserved. No part may be copied or reproduced in any form without prior written consent.

Document Title: PPA5/15xx Start Up Guide v4.0

Document Release Date: 02nd March 2021

PPA5xx/15xx Firmware version on release date: v2.87

Document Ref: D000220 issue 04

CONTENTS

Contents.....	Page.1
1. Getting Started.....	Page.2
1.1 Unpacking and Contents.....	Page.2
1.2 Handle Fitting.....	Pages.3-4
2. Safety.....	Page.5
2.1 Safety Instructions.....	Page.5
2.2 Cautions.....	Page.6
2.3 Warranty.....	Page 7
3. Front Panel Layout Diagram.....	Page.8
3.1 Front Panel Display Key Functions.....	Pages.9-12
4. Rear Panel Layout Diagram.....	Page.13
5. Basic Key Operation.....	Page.14
5.1 Set up for Power On.....	Page.14
5.2 Setting the Time.....	Page.14
5.3 Setting the Date.....	Page.15
5.4 Adjusting the Screen Brightness.....	Page.15
5.5 Adjusting Keyboard Beep.....	Page.15
5.6 Setting User Data.....	Page.16
6. Quick User Guide.....	Page.17
6.1 Wiring.....	Page.17
6.2 Start Up.....	Page.18
6.3 Zoom Functions.....	Pages.19-20
6.4 Results Screen.....	Page.21
6.5 Harmonics Mode.....	Pages.22-24
6.6 Oscilloscope Mode.....	Pages.25-27
7. Datalogs including transfer to a USB memory stick...	Page.28-31
8. Repair / Recalibration.....	Page.32
9. Specifications.....	Page.33-35
10. PPA Comparison Table.....	Page.36

1 Getting Started

1.1 Unpacking

When you receive your product, please remove all contents from the carton and check each item against the supplied packing list. If any item is missing or damaged during transportation, immediately contact your N4L office or local sales distributor.

Please retain the original packaging to ensure easy and safe return of the equipment for calibration etc.

If rack mounting brackets have been fitted to the equipment, please remove them before packaging the equipment for return. This reduces the risk of damage to the equipment during transportation.

1.2 Fitment of the PPA series Carry/Tilt handle

PPA5/15/45/55 series power analyzers are supplied with a Carry/Tilt Handle that is located within the accessory pack.


The handle allows a user to position the instrument upwards at one of two angles for easier viewing when the instrument is positioned below the line of sight. The design also allows storage under the unit without obstruction of the rubber feet so that instruments can be stacked and is easily removed to allow the connection of rack mounting brackets without the need to remove instrument covers.

Correct installation of the handle is important to ensure the correct operation and long life the handle.

The following pictures illustrate correct and incorrect handle fitment:



Correct 1

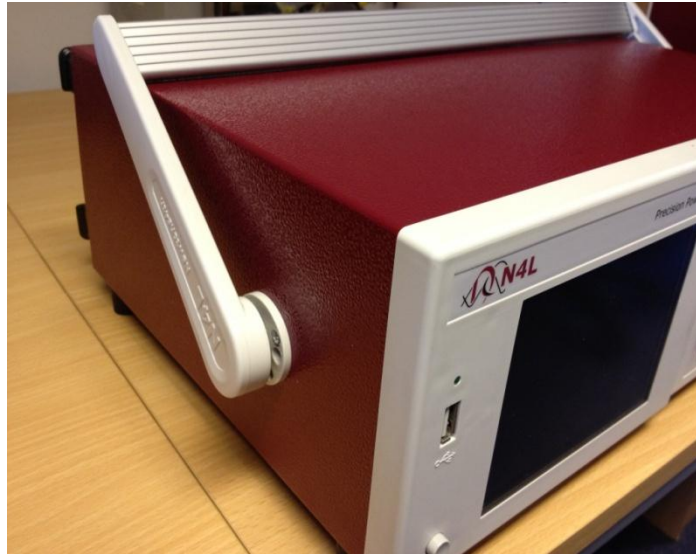


Correct 2

Correct 1/2 – Correct fitting is from the top of the unit as shown here

PPA5xx/15xx Start Up Guide



Correct 3

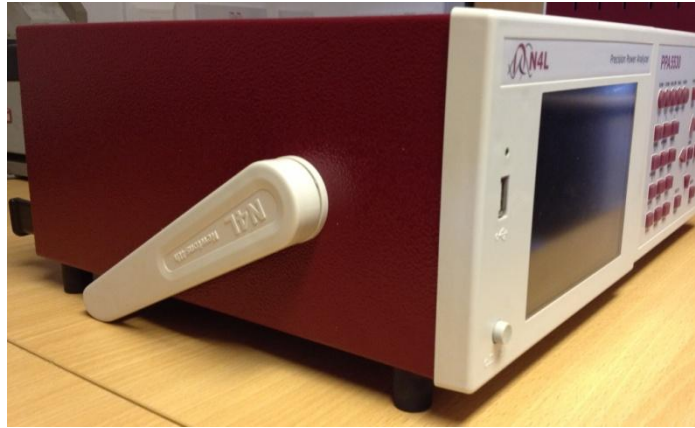

Correct 4

A correctly fitted handle will have the 'N4L Newtons4th' wording in the correct reading plane when the handle is to the front of the instrument (Pic. 3)

Also, a correctly fitted handle will allow storage under the unit (Pic. 4)



Incorrect 1



Incorrect 2

Fitting the handle from the bottom of the unit as shown here wrong (Incorrect 1)

Incorrect fitting can be seen because the handle does not fit correctly under the unit and handle sides do not fit flush with the registration washer (Incorrect 2)

2 Safety

2.1 IMPORTANT SAFETY INSTRUCTIONS

This equipment is designed to comply with BSEN 61010-1 (2001) (Safety requirements for electrical equipment for measurement, control, and laboratory use) – observe the following precautions:

- Ensure that the supply voltage agrees with the rating of the instrument printed on the back panel **before** connecting the mains cord to the supply
- This appliance **must** be earthed. Ensure that the instrument is powered from a properly grounded supply
- The inputs are rated at 1kV rms or dc cat II; 600V rms or dc cat III. **Do not exceed the rated input**
- Keep the ventilation holes on the underneath and rear free from obstruction
- There are no user serviceable parts inside the instrument – do not attempt to open the instrument, refer service to the manufacturer or his appointed agent

Input Connections:

It is critical that the 4mm inputs and BNC inputs on each PPA input channel are not connected to any external circuit at the same time.

You MUST only use EITHER the 4mm OR the BNC connection – NOT both, this applies to both Voltage and Current inputs.

Note: Newtons4th Ltd shall not be liable for any consequential damages, losses, costs or expenses arising from the use or misuse of this product however caused

2.2 CAUTIONS

- **Do not use a damaged power cord or cables**

Doing so may cause an electric shock or a fire

- **Do not place any object on this instrument**
- **Do not use this instrument if faulty**

If you suspect the instrument to be faulty, contact your local N4L office or representative for repair (see section 7)

2.3 Warranty

This product is guaranteed to be free from defects in materials and workmanship for a period of 36 months from the date of purchase

In the unlikely event of a problem within this guarantee period, first contact Newtons4th Ltd or your local representative to give a description of the problem. Please have as much relative information to hand as possible – particularly the serial number and release number these can be found by pressing the SYSTEM button then the “Left Arrow”


If the problem cannot be resolved directly then you will be given an RMA number and asked to return the unit. The instrument will be repaired or replaced at the sole discretion of Newtons4th Ltd

This guarantee is limited to the cost of the PPA5xx/15xx itself and does not extend to any consequential damage or losses whatsoever including, but not limited to, any loss of earnings arising from a failure of the product or software

In the event of any problem with the instrument outside of the guarantee period, Newtons4th Ltd offers a full repair and re-calibration service. Contact your local representative. It is recommended that the PPA5xx/15xx be re-calibrated annually

3 Front Panel Layout

<u>1.</u> Display Screen
<u>2.</u> Screen Display Function Buttons
<u>3.</u> Power Analyzer Mode Buttons
<u>4.</u> Handle
<u>5.</u> Measurement Control Function Keys
<u>6.</u> Power On / Off Button
<u>7.</u> Rubber Feet
<u>8.</u> Menu Selection and Cursor Controls
<u>9.</u> Measurement Settings Buttons
<u>10.</u> Front USB Port

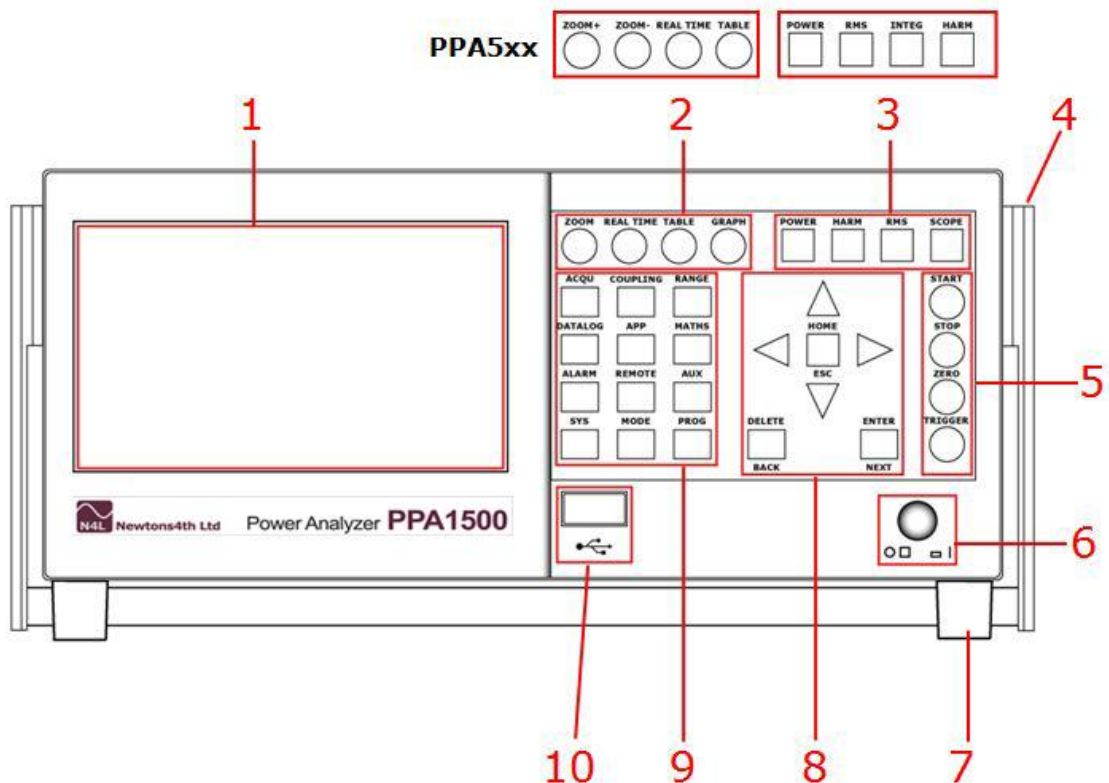

PPA5xx/15xx Start Up Guide

3.1 PPA5xx/15xx DISPLAY KEY FUNCTIONS

1	Display Screen	480x272 dot full colour TFT screen for displaying all information, Note: screen brightness can be set as described in section 5 of this user guide
----------	-----------------------	--

2	Screen Display Function Buttons	
	Zoom (PPA15xx)	Increase or Decrease font size of selected parameters on display screen
	Zoom+ Zoom- (PPA5xx)	Individual buttons to increase or decrease selected parameters font size
	Real Time	Displays data information in real time within display screen press again to place on screen information into hold
	Table	Displays results from Datalog/Harmonics in table format
	Graph (PPA15xx)	Displays results from Datalog/Harmonics in graph format

3	Power Analyzer Mode Buttons	
	Power	Sets PPA into Power Analyzer measurement mode
	Harm	Sets PPA into Harmonic measurement mode
	RMS	Sets PPA into True RMS Voltmeter measurement mode
	Scope (PPA15xx)	Sets PPA into Scope measurement mode
	Integ (PPA5xx)	Sets PPA into Power Integrator measurement mode

4	Handle Fixture	Carrying handle utilised to site the instrument in an angular position
----------	-----------------------	--

5	Measurement Control Function Keys	
	Start	Press to enable any Datalog measurement (see section 9)
	Stop	Press to stop any Datalog measurement
	Zero	Press to re-zero measurement inputs
	Trigger	Press to re-synchronise instrument to input signal

6	Power Button	Power On / Off button
----------	---------------------	-----------------------

7	Rubber Feet	Rubber standoff feet
----------	--------------------	----------------------

PPA5xx/15xx Start Up Guide

8	Menu Selection and Cursor Control Buttons	
Enter / Next	Press to confirm any parameter configuration setting or move through selected mode screen displays	
Delete / Back	Press to delete any inputted data or scroll back within any results screen display	
Home / Esc	Press to return to the home page when any parameters have been adjusted and entered, or will escape from any screen view and return to the selected mode's home screen	

9	Measurement Settings Buttons	
ACQU		
Wiring	Select wiring configuration to reflect instruments connections to DUT	
Speed	Select speed to which the instrument will update computed results	
Smoothing	Smoothing filter settings, enables smoother data results in noisy environments	
Smoothing Response	Filtering reset settings, in response to significant input signal change - auto or fixed	
Frequency Reference	Allows the frequency to be measured from voltage or current reference	
Frequency Reference	Allows the frequency to be measured from any channel on a multi phase instrument	
Phase Angle Reference	Input reference point for phase angle measurements	
Frequency Filter	Frequency filter for a PWM waveform, to detect fundamental frequency (parallel digital filter)	
Low Frequency	Low fundamental frequency measurement option, enable if fundamental is below 5Hz	

ADVANCED OPTIONS:		
DFT Selectivity	Bandwidth settings for DFT analysis	
Ignore Overload	Ignores over ranging spikes in measurements caused in noisy environments	
Frequency Lock	Manually input a frequency to be used for measurements, or use dynamic when input frequency is fluctuating / ramping	

COUPLING		
Coupling	Set instrument fundamental frequency detection range; ac+dc = dc to 2MHz ac = 5Hz to 2MHz dc = No frequency detection	

PPA5xx/15xx Start Up Guide

Noise Filter	Set to remove noisy frequency components from any measurements (in-line digital filter)
--------------	---

RANGE	
Voltage Input	Set voltage input to external BNC or internal voltage attenuator
Autoranging	Will allow the instrument to take full control and select correct ranges, or set manually as required
Minimum Range	Select minimum voltage range
Scale Factor	Manually enter any scale factor required
Current Input	Set current input to external BNC or internal current shunt
Autoranging	Will allow the instrument to take full control and select correct ranges, or set as required
Minimum Range	Select minimum current range
Scale Factor	Manually select any scale factor required

DATALOG	
Datalog	Enables user to select memory format to save log measurements and to set log data information

APP	
Mode	Select appropriate application mode for measurements
Default Settings	Select to set instrument into default settings for respective APP mode

MATHS	
Formula	Maths calculation functions are available from a dropdown menu. To display maths functions on the main display screen it will be necessary to set the "penultimate/last line" parameter to "maths functions" This is found within the MODE menu (section 9- MODE) and selecting power analyzer/RMS mode

ALARM	
Alarm 1 Data	Select parameter to be monitored with alarm settings
Alarm Type	Select alarm rules
High Threshold	Set upper limit threshold, selected parameter will activate alarm
Low Threshold	Set lower limit threshold, selected parameter will activate alarm
Alarm 2 Data	Select parameter to be monitored with alarm settings
Alarm Type	Select alarm rules
High Threshold	Set upper limit threshold, selected parameter will activate alarm
Low Threshold	Set lower limit threshold, selected parameter will activate alarm

PPA5xx/15xx Start Up Guide

REMOTE	
Resolution	Press to set the data resolution and change the format to which the instrument responds to future commands Normal = Data Resolution to 5 decimal points High = Data Resolution to 6 decimal points Binary = Transmitted in Binary Format
Interface	Press to select mode for communications interface connection between PPA and PC
Recall with Program	When enabled recalls communication port settings from any stored memory location
Screen Print	Print screen options, when USB memory stick is enabled, press and hold the "START" button to dump screen data to memory stick

AUX	
Auxiliary Device	Select if any auxiliary device is to be connected to the instrument

SYSTEM	
System	View all instruments current firmware levels and update user information


MODE	
Mode	Mode specific settings, see user manual for more information

PROG	
Memory	Select memory application: internal or USB memory stick
Data	Select data type to be stored
Action	Select action to be applied to data
Location	Select memory location to store test parameters / results
Name	Name selected stored test
Execute	Select to execute any changes made within the above PROG menus

10	USB Port	USB port for memory stick device. Note when rear USB port is in use front USB port will be disabled
-----------	-----------------	---

4 Rear Panel Layout

<u>1.</u> Voltage & Current Internal Inputs
<u>2.</u> Voltage & Current External Analogue Inputs
<u>3.</u> Auxiliary Port
<u>4.</u> Communication Ports
<u>5.</u> Mains Supply Inlet

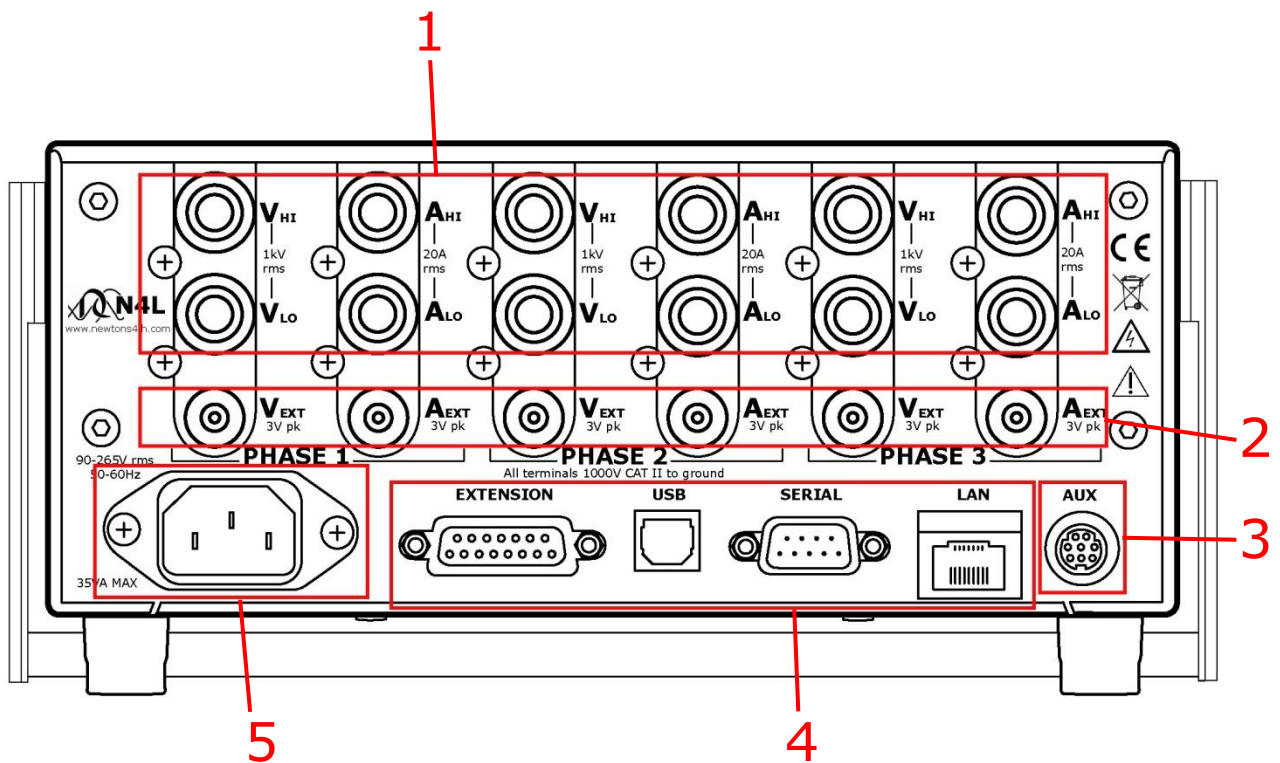

5 Basic Key Operations

This chapter is designed to help the user familiarise themselves with the instrument by setting up some basic functions

5.1 SET UP FOR POWER ON

Install Equipment	⇒	Installation of Equipment
Plug in and turn on power	⇒	Power Supply Connection



5.2 SETTING THE TIME

Power Analyzer Default Screen Appears

Press "SYS" Key	⇒	System Option Screen Opens
↓		
Press ▼ Key	⇒	Flashing Red Cursor will surround Hours
↓		
Use Numerical Keys	⇒	Set Hours within cursor
↓		
Press Enter Key	⇒	Hours in clock now set
↓		
Press ▼ Key	⇒	Flashing Red Cursor moves to Minutes
↓		
Use Numerical Keys	⇒	Set Minutes within cursor
↓		
Press Enter Key	⇒	Minutes in clock now set
↓		
Press ▼ Key	⇒	Flashing Red Cursor moves to Seconds
↓		
Use Numerical Keys	⇒	Set Seconds within cursor
↓		
Press Enter Key	⇒	Clock timings will now be complete



5.3 SET THE DATE

Press ▼ Key	⇒	Flashing Red Cursor moves to Date
↓		
Use Numerical keys	⇒	Set Date within Cursor
↓		
Press Enter Key	⇒	Numerical Day of Month is set
↓		
Press ▼ Key	⇒	Flashing Red Cursor moves to Month
↓		
Press ▶ Key	⇒	Month Calendar Opens
↓		
Press ▼ Key	⇒	Select Month to be entered
↓		
Press Enter Key	⇒	Month will be set
↓		
Press ▼ Key	⇒	Flashing Red Cursor moves to Year
↓		
Use Numerical Keys	⇒	Set Year within Cursor
↓		
Press Enter Key	⇒	Date will now be Set



5.4 ADJUSTING THE BRIGHTNESS

Press ▼ Key	⇒	Flashing Red Cursor moves to Brightness
↓		
Press ▶ Key	⇒	Changes between High or Low option
↓		
Press Enter Key	⇒	Screen Brightness will now be set




5.5 ADJUST KEYBOARD BEEP

Press ▼ Key Twice	⇒	Red cursor moves to Keyboard beep
↓		
Press ▶ Key	⇒	Changes between Enable / Disable option
↓		
Press Enter Key	⇒	Keyboard beep now set

PPA5xx/15xx Start Up Guide

Now that you have familiarised yourself with the instruments keypad we can now complete this section by filling in the User Data Information

5.6 USER DATA

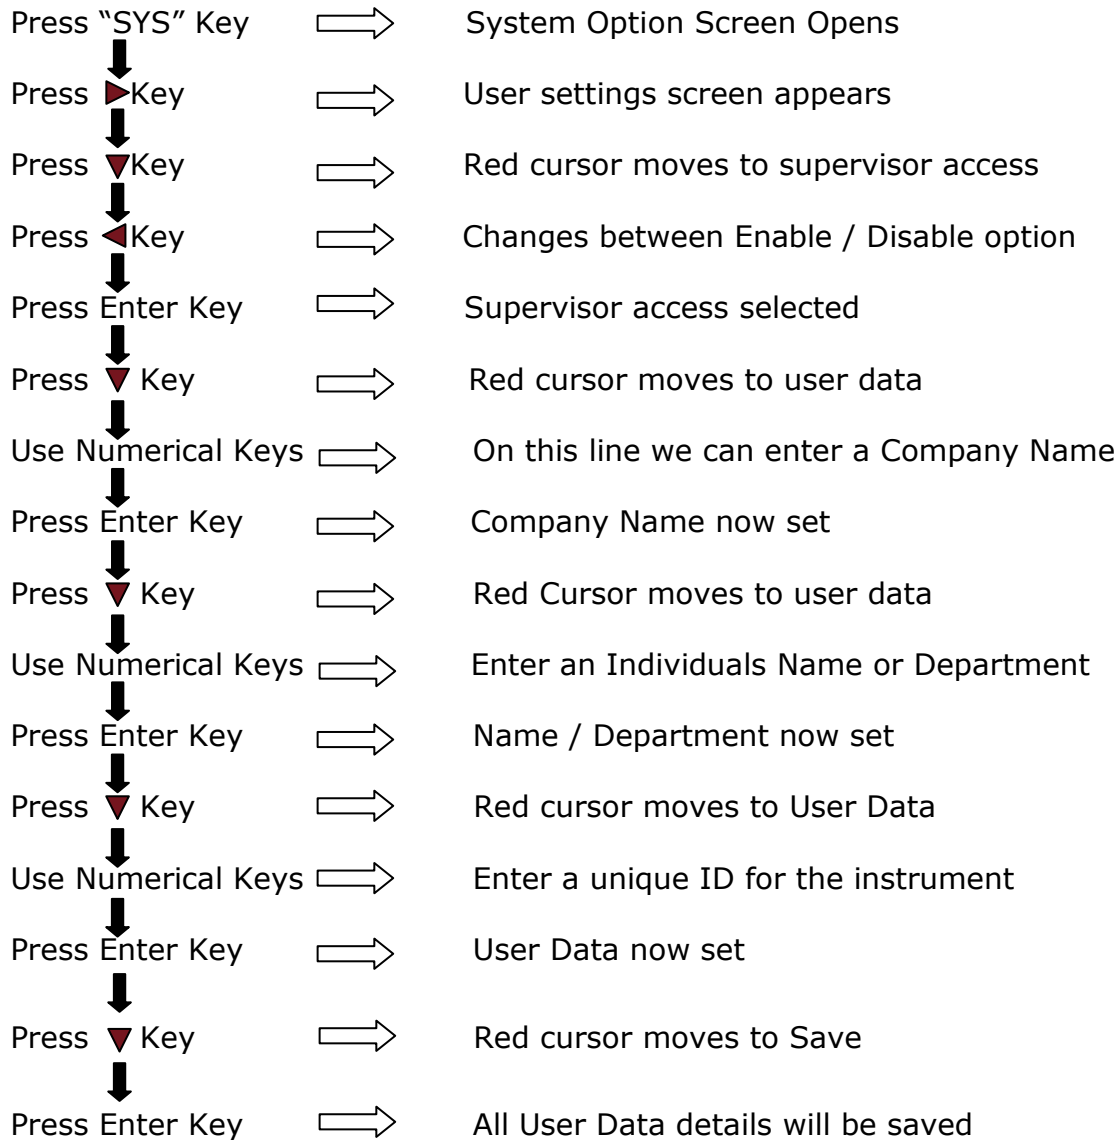

Note: Supervisor Access is not currently supported.

6 PPA15xx Quick User Guide

N4L Power Analyzers cover 1 to 3 phase applications depending on the model and up to 12 phases via N4L's PPALoG software application in both low and high current models. Each phase input has wide ranging voltage and current channels which are fully isolated from each other and from ground

The voltage and current inputs are simultaneously sampled and the data is analysed in real time by a high speed DSP (digital signal processor). A separate CPU (central processing unit) takes the DSP results for display and communications. At the heart of the system is an FPGA (field programmable gate array) that interfaces the various elements

This powerful, versatile structure allows the measurement of a wide range of power related parameters


6.1 WIRING

Care must be taken when connecting up the instrument

Remember to configure the Voltage and Current inputs as per the drawing shown

Current in Series – (Hi in Low out)

Voltage in Parallel

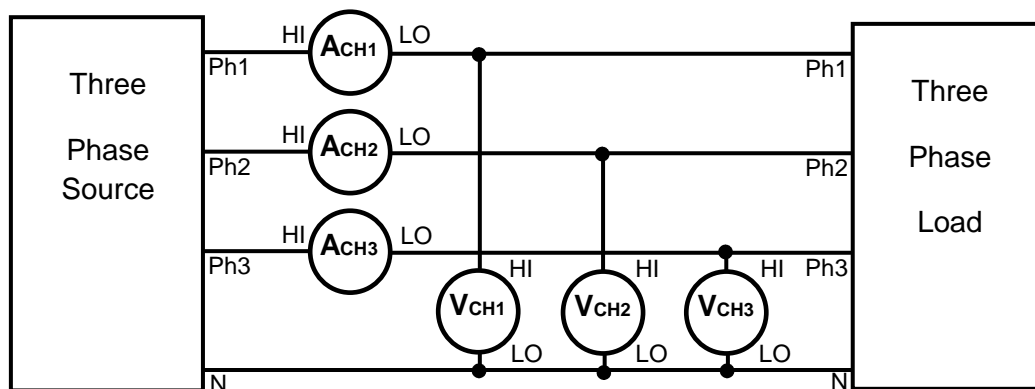

Example shown is a 3 phase 3 wattmeter configuration

6.2 START UP

Once connected, power on the instrument and the analyzers factory default settings from memory location 0 will be displayed as per Fig 1 Note: these can be altered to your own desired settings (see the User Data section under System Options, section 6 of the main user guide)

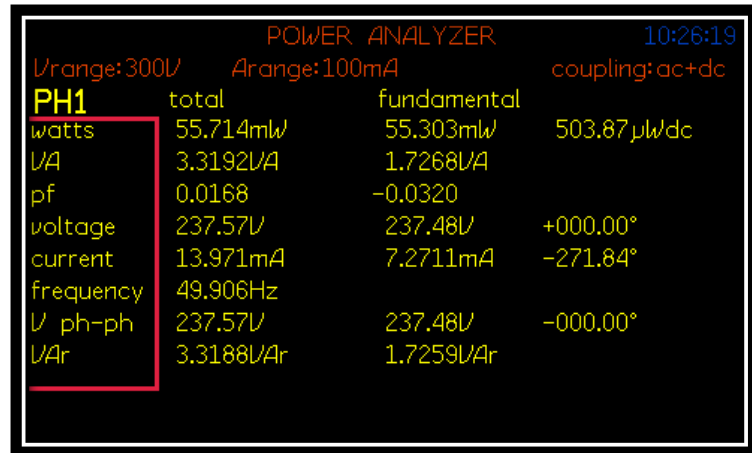


Fig 1

Within the Power screen you will notice 2 sets of measurements; "Total" and "Fundamental" as seen in Fig 2

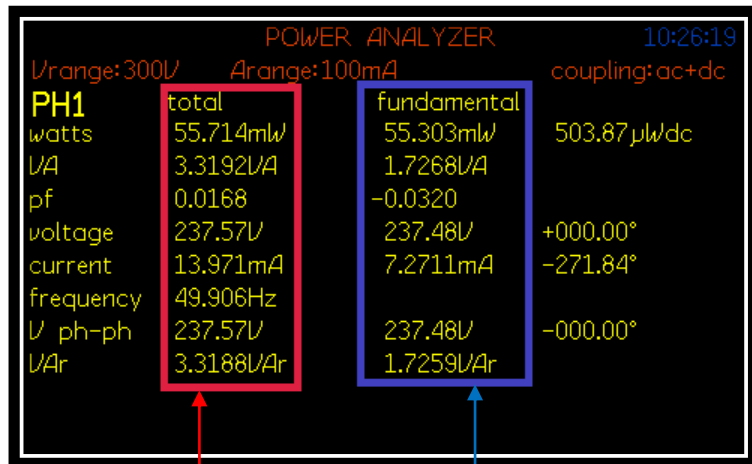


Fig 2

Total Measurements

Fundamental Measurements

Total Measurements = Fundamental + Harmonics + Noise

Fundamental = Fundamental Power Measurements (All Distortion Removed)

Each measurement mode is pre-configured to display relevant parameters. Up to 4 functions can be selected and zoomed in. These can be viewed within 3 zoom screens, the Zoom function is described in the next section of this manual

6.3 **ZOOM FUNCTION**

Within the Power screen you are able to select up to 4 measurements that can be made more prominent from the rest, these can be selected and changed by the user as required

To select or change any zoom measurement

Action	Result
Press "ZOOM" until:	4 flashing red boxes appear
Press "DELETE"	Red boxes will disappear replaced by 1 white flashing box
Press ▲ ▼ ◀ ▶ Keys	Move box to desired measurement
Press "ENTER"	Measurement will be selected
Press ▲ ▼ ◀ ▶ Keys	Move box to desired measurement
Press "ENTER"	Measurement will be selected

Continue until all measurements you require are selected, up to a maximum of 4

By pressing the "ZOOM" button you can now alter the on screen display to show a different configuration of the selected measurements

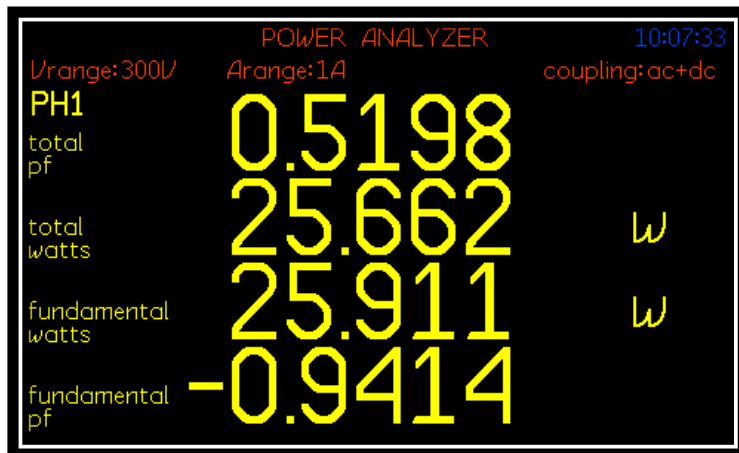


Fig 3

Zoom 3:

In zoom 3 mode you will display only the 4 selected zoomed measurements as shown (Fig 3)

Note: These will be displayed in the order they were selected

Zoom 4:

In zoom 4 mode you will display only the first 3 selected zoomed measurements as shown (Fig 4)

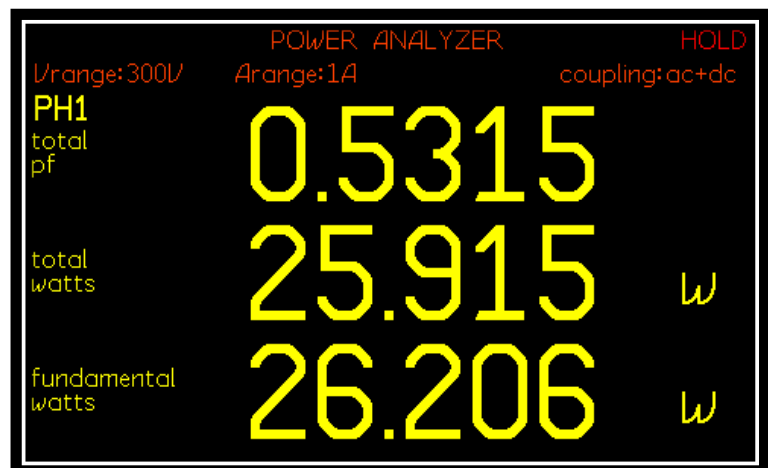


Fig 4

Continue to press the "ZOOM" button to scroll through all screen options

6.4 RESULTS SCREEN

We will now take a look at the results screen as shown in Fig 5 and explain why we have a difference in the "pf" readings between the Total and Fundamental readings

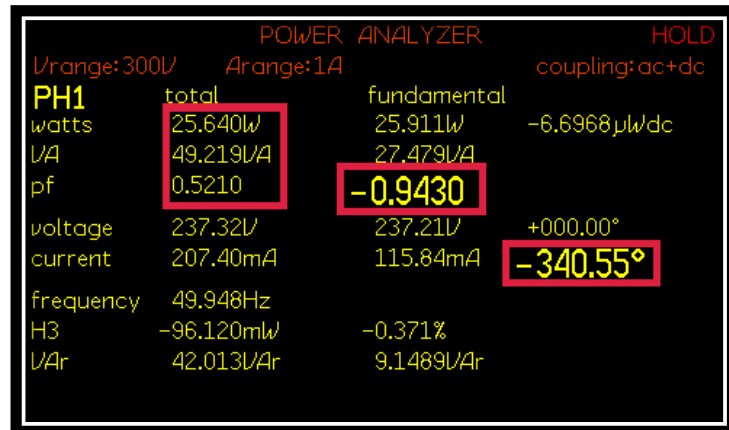


Fig 5

As you will notice there is quite a difference within the Power Factor readings from the same DUT (Device Under Test)

In the Total measurement the Power Factor is calculated by W / VA or $(V \times I \times \cos \theta)$

In the Fundamental Measurement the Power Factor is derived by taking the Cos of the Phase Angle, often referred to as "cos phi"

Total Measurement = $25.640 \div 49.219 = \text{pf } 0.5210$

Fundamental measurement = $360^\circ - 340.55^\circ = 19.45^\circ$ $\cos (19.45) = \text{pf } 0.9430$

The difference in the pf measurements is the result of distortion being present

You will now be able to see this distortion within the next set of screenshots using Harmonics and Oscilloscope Mode

6.5 HARMONICS MODE

By selecting the "HARM" mode button we are now able to see the Harmonic Analyzer results screen Fig 6, showing all distortion present

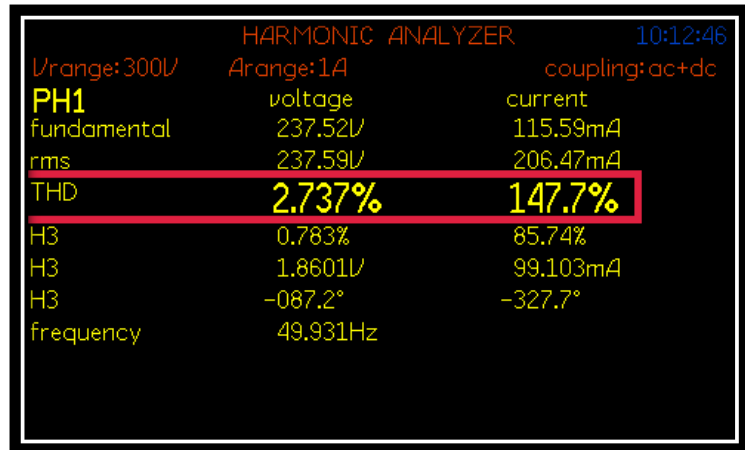


Fig 6

As you will see we are showing both the Voltage and Current THD (total harmonic distortion) with the Current exhibiting a greater value

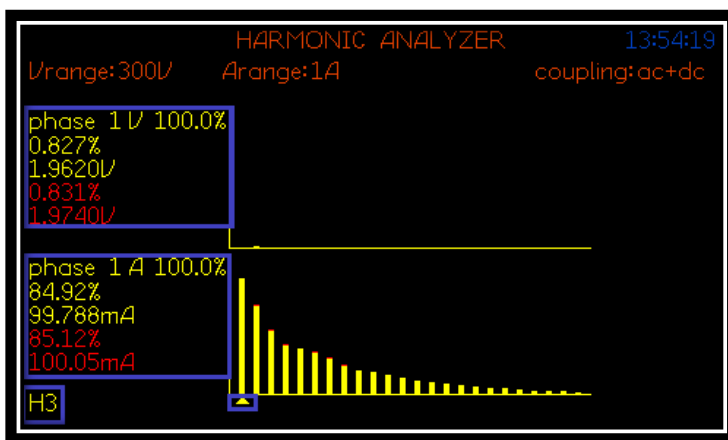


Fig 7

Now press the "GRAPH" button (PPA15xx) and you will see a representation of the distortion as a bar graph as shown in Fig 7

Fig 7 displays a full bar graph of results over all of the harmonic range; it will also allow you to see any individual harmonic data on its own. In the bar graph above we can see that a significant amount of distortion is appearing within the Current which corresponds with the results seen in Fig 6, you can also see a set of selected data on the left hand side of the bar graph, these are the results collected from the 3rd harmonic (H3). To scroll through and select other harmonic data use the left and right arrow buttons to move the cursor at the bottom of the bar graph to your desired harmonic

PPA5xx/15xx Start Up Guide

Within Fig 6 there was a small amount of Voltage distortion but this was not visible within the bar graph of Fig 7. In default mode both the Voltage and Current graphs will be set and viewed at 100% of the set range as shown in Fig 8

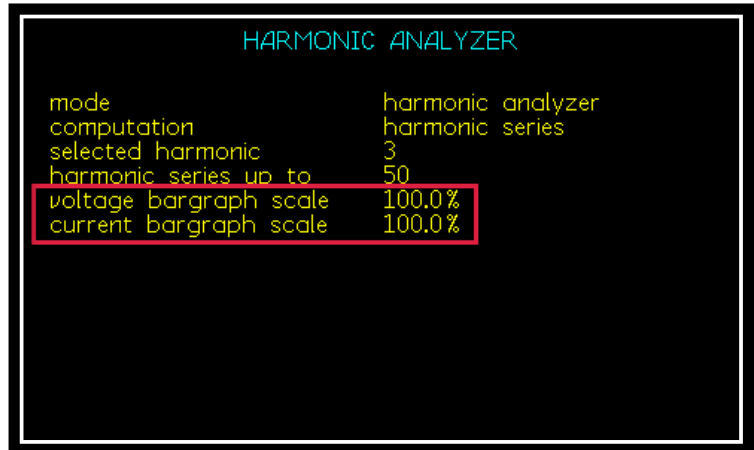


Fig 8

To view a small amount of distortion you will need to reset the bar graph scaling to a smaller value of the maximum scale

To view the Harmonic Distortion within the Voltage in this case it is required to reconfigure the Harmonic bar graph scale parameters as shown in Fig 9. To change the bar graph scaling you need to access the Harmonic Analyzer screen as shown

ACTION

Press "HARM"

Press ▼ 5 Times

Press "5"

Press "ENTER"

Press "HOME" 2 Times

RESULT


Harmonic Analyzer Screen will appear

Cursor will move to Voltage Bargraph Scale

5.000% will now be selected

Scaling will now be set to 5% of max Voltage

Display will return to results screen

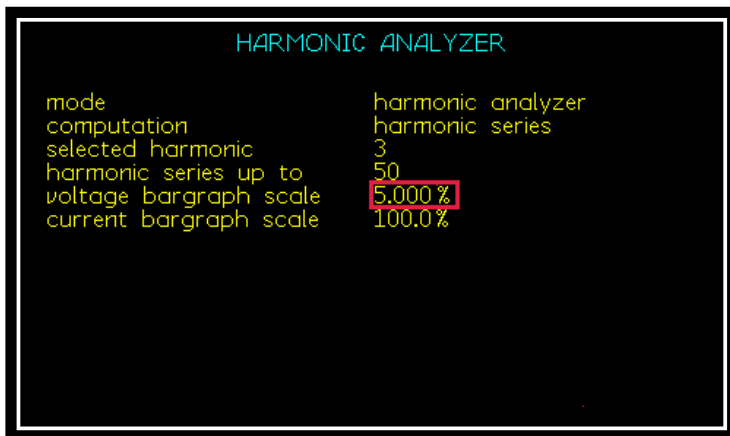

Press "GRAPH" to show the new bar graph results with the voltage results set to 5% of full voltage range as shown in Fig 10

Fig 9

As you can now see, a bar graph of Voltage distortion is present, the data on the left stays the same but due to the fact we are now only looking at a graph that is 5% of the voltage range the small amount of distortion is clearly visible

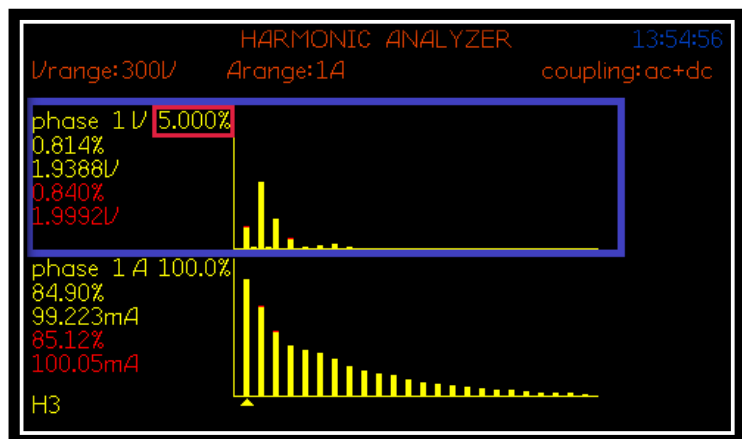


Fig 10

6.6 OSCILLOSCOPE MODE

By pressing the "SCOPE" button we can now confirm that the distortion seen within the power results is present visually on the oscilloscope

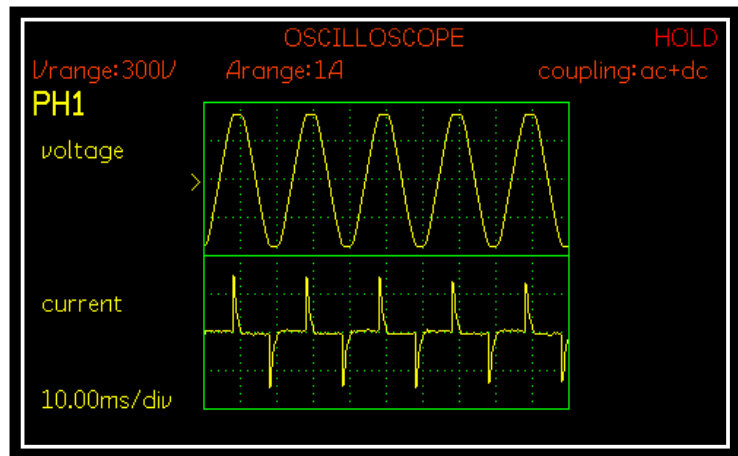


Fig 11

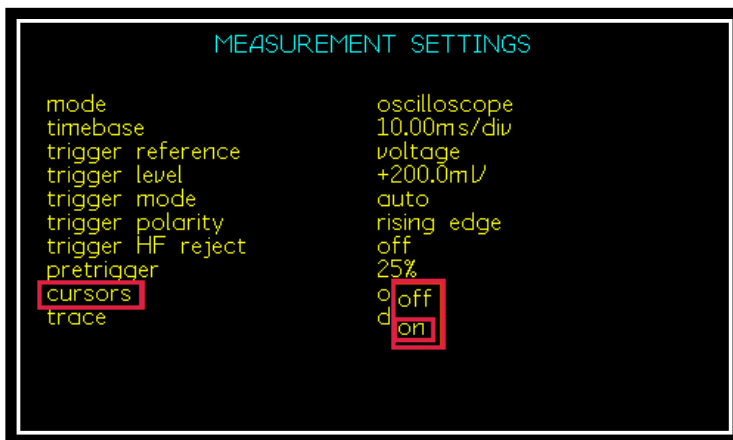


Fig 12

Press "SCOPE" again to go to the Oscilloscope's settings page. Here we will enable the screens cursors in order to obtain a measurement on both the Voltage and Current Waveforms

ACTION

Press ▼ 9 Times

Press ► Key

Press "ENTER" Key

RESULT

Red box will move to cursors parameter

Select "ON" from the dropdown menu (Fig 12)

Cursors will become active on scope screen

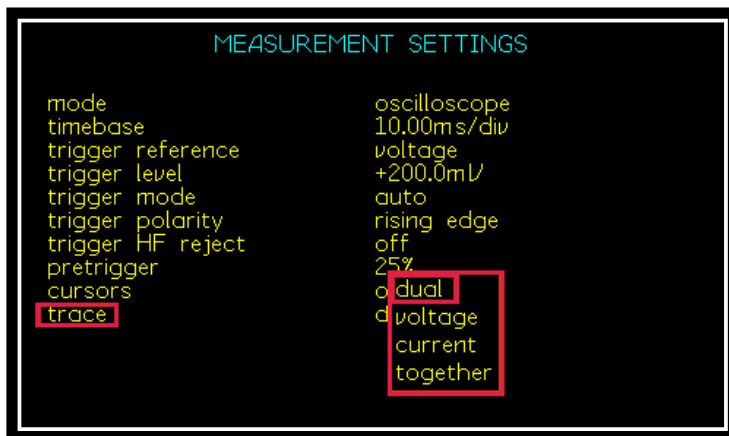


Fig 13

Now we will set which of the waveforms are to be viewed on the scope screen. All options can be seen in Fig 13, on this occasion we will select dual

ACTION

Press ▼ Key

Press ► Key

Press "ENTER" Key

Press "SCOPE" Key

RESULT

Red box will move to trace parameter

Select "DUAL" from the dropdown menu (Fig 13)

Dual graphs will now be displayed upon the screen

Screen will show Voltage & Current waveforms with cursors present (Fig 14)

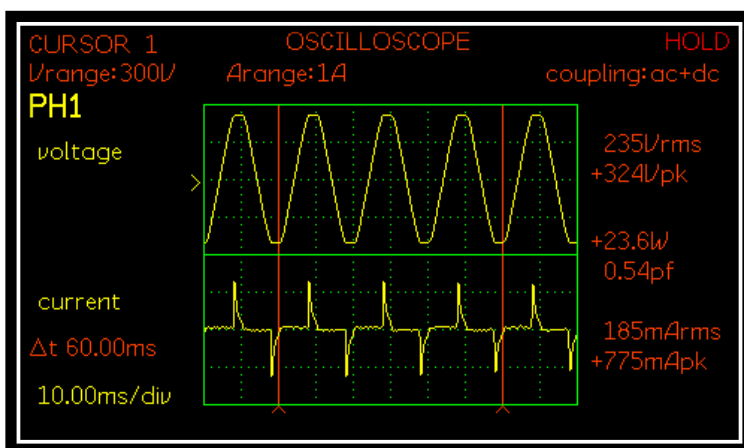


Fig 14

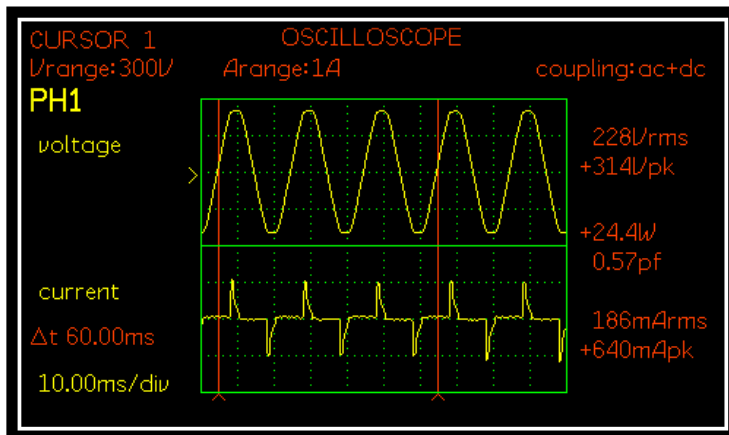


Fig 15

Fig 15 shows the measurements relating to cursor 1 and its position within the Voltage and Current waveforms

To switch between the cursors on the screen display use the ▼▲ keys

Fig 16 shows the measurements relating to cursor 2 and its position within the Voltage and Current waveforms

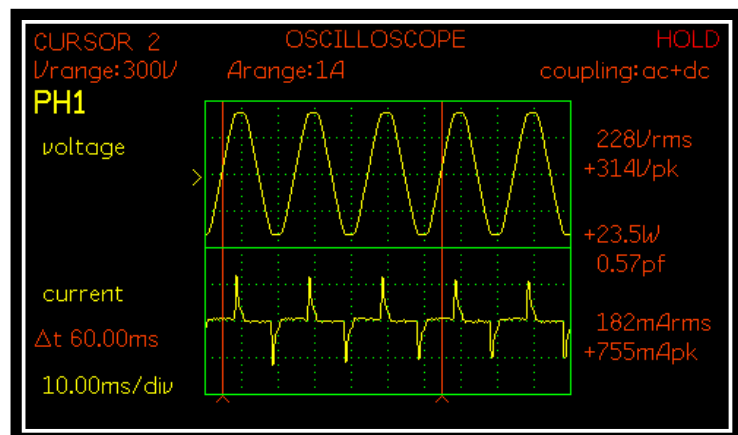


Fig 16

Viewing both Fig's 15 & 16 above and looking at the measurements from the Voltage waveform we can see that by setting both cursor 1 and cursor 2 to encompass an integral number of cycles the Vrms value is the same as in the "POWER" mode

It is important to remember that an **integral** number of cycles are required (within the cursors) in order for the instrument algorithms to output correct results

7 Datalogs including transfer to a USB Memory stick

Datalogs can be stored to the PPA RAM or directly to a USB memory stick. Datalogs saved to RAM can later be transferred to a USB memory stick.

This section explains the procedure for setting up and running a datalog. The procedure for exporting the datalog from internal RAM to a USB memory Stick is then described. The memory stick capacity should not exceed 2GB.

It is recommended to use N4L USB sticks.

1. Setup Datalog (DATALOG MENU)

Press the datalog button on the front panel.

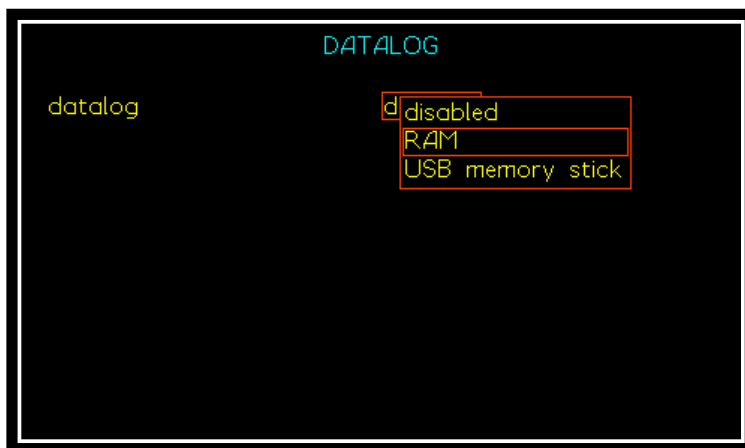


Fig 17

Use the ▼ key to step down to datalog.

Select either RAM or USB memory stick from the drop down menu.



Fig18

When the RAM option is selected: Use the ▼ key to step down to "interval" and enter the time between datalog measurements.



When the USB memory stick option is selected:


Use the ▼ key to step down to "location" and the number of the location on the memory stick where the datalog is to be stored.

Fig 19

Use the ▼ key to step down to "name" and give the location a name.

Use the ▼ key to step down to "interval" and enter the time between datalog measurements.

2. Starting / Stopping the Datalog.

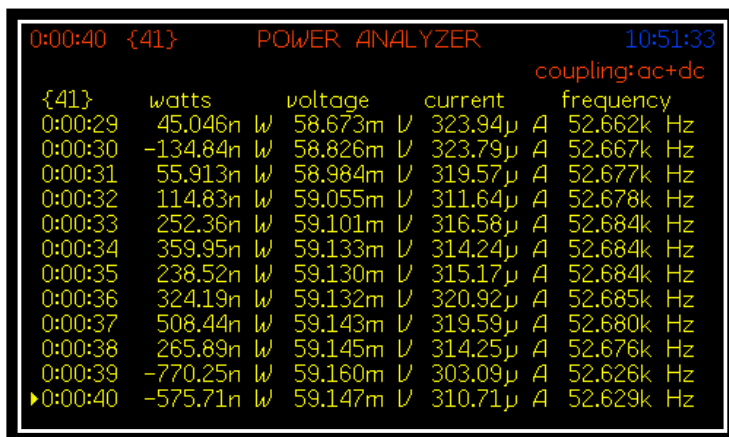

Press the start button on the front panel of the PPA to start the datalog.

Press the Stop button to end the datalog.

Fig 20

3. Store Datalog to External USB Memory Stick

To store the Datalog to a USB stick, press the PROG button on the front panel.



Use the ▼ key to step down to "memory". Select USB memory stick from the drop down menu.

Use the ▼ key to step down to "data" and select datalog from the drop down menu.


Fig 21

Use the ▼ key to step down to "action" and select store from the drop down menu.

Use the ▼ key to step down to "location" and the number of the location on the memory stick where the datalog is to be stored.

Use the ▼ key to step down to "name" and give the location a name.

Use the ▼ key to step down to "execute" and then press "Enter"

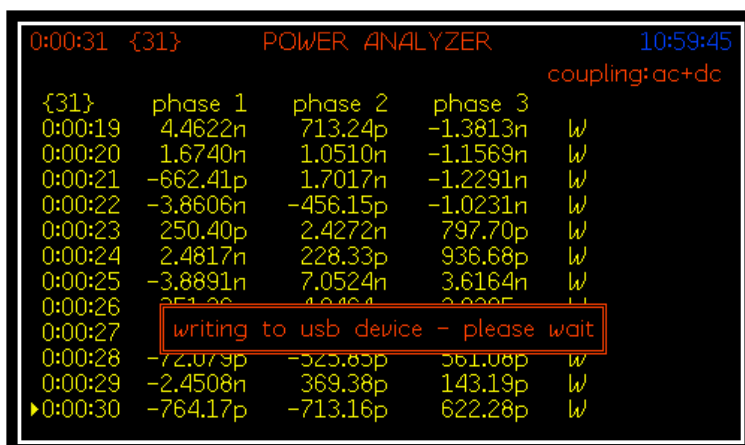


The datalog will then be transferred to the USB stick.

The message will be displayed during transfer but will disappear once the transfer is complete.

Fig 22

PPA5xx/15xx Start Up Guide

4. Locate file on memory stick, the file format will have a .txt extension

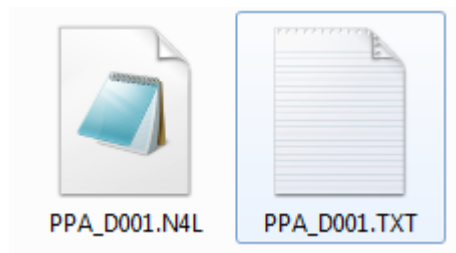

D001 represents "location 1" as specified in item 3 above.

5. NOTE: Data presented within the .txt file for time will be displayed as a fraction of an hour, to convert this data back into real time the user will need to multiply the data by 3600 (seconds within an hour)

8 Repair / Recalibration

In the event of any problem with the instrument, during or outside of the guarantee period, contact your local representative

Newtons4th Ltd offer a full repair and re-calibration service

It is recommended that the instrument be re-calibrated annually

Contact details:

1 Newtons4th Ltd
1 Bede Island Road
Leicester
LE2 7EA
United Kingdom

Tel: (0116) 230 1066 International: +44 116 230 1066
Fax: (0116) 230 1061 International: +44 116 230 1061

E-mail address: sales@newtons4th.com
office@newtons4th.com

Web site: www.newtons4th.com

We have a policy of continuous product improvement and are always keen to hear comments, whether favourable or unfavourable, from users of our products. Please telephone, fax, write or e-mail with your comments

9 Specifications

Frequency Range	
Normal:	PPA5xx: DC and 10mHz to 500KHz PPA15xx: DC and 10mHz to 1MHz
x10 mode:	DC and 10mHz to 100kHz

Frequency	
Accuracy:	0.02%

Voltage Input*	
Ranges:	Normal - 1Vpk to 2500Vpk (1000Vrms) in 8 ranges x10 mode - 100mVpk to 300Vpk in 8 ranges
Accuracy:	Normal - 0.05%Rdg +0.1%Rng +(0.005% x kHz) +5mV* x10 mode - 0.05%Rdg +0.1%Rng +(0.01% x kHz) +1mV*
External sensor input:	1mVpk to 3Vpk in 8 ranges – BNC connector Accuracy 0.05%Rdg +0.1%Rng +(0.005% x kHz) +5μV*

Current Input*	
20Arms	
Accuracy:	Normal - 0.05%Rdg +0.1%Rng +(0.005% x kHz) +500uA* x10 mode - 0.05%Rdg +0.1%Rng +(0.01% x kHz) +100uA*
30Arms	
Accuracy:	Normal - 0.05%Rdg +0.1%Rng +(0.005% x kHz) +1mA* x10 mode - 0.05%Rdg +0.1%Rng +(0.01% x kHz) +300uA*
External sensor input:	1mVpk to 3Vpk in 8 ranges – BNC connector Accuracy 0.05%Rdg +0.1%Rng +(0.005% x kHz) +5μV *

Phase Accuracy	
Normal:	10 millidegrees + (10 millidegrees x kHz)
x10 mode:	10 millidegrees + (20 millidegrees x kHz)

Watts Accuracy	
Normal:	[0.1% +0.1%/pf +(0.01% x kHz)/pf] Rdg +0.1%VA Rng
x10 mode:	[0.1% +0.1%/pf +(0.02% x kHz)/pf] Rdg +0.1%VA Rng

40Hz-850Hz Accuracy – V,A and Watts	As above with range error reduced from +0.1%V,A,VA Rng to +0.05%V,A,VA Rng
--	---

PPA5xx/15xx Start Up Guide

DC Accuracy*	
Voltage:	0.1% Rdg + 0.1% Rng + 10mV (or +2mV in X10 mode)
Current:	
(20Arms)	0.1% Rdg + 0.1% Rng + 3mA (or +200μA in X10 mode)
(30Arms)	0.1% Rdg + 0.1% Rng + 5mA (or +600μA in X10 mode)
External sensor input:	0.1% Rdg + 0.1% Rng + 10μV

*Note :

AC specification valid when signal RMS is >20% of range

DC specification valid when signal RMS is >30% of range

Total Harmonic Distortion (THD) Accuracy	
$THD + THD Error = \left(\frac{1}{h1 + h1 error} \right) \sqrt{\sum_{i=2}^{i=n} (hi + hi error)^2}$	
Voltage:	
Normal:	hi error (Voltage) = 0.05% hi rdg + 0.1% rng + 0.005% * KHz + 5mV
x10 mode:	hi error (Voltage) = 0.05% hi rdg + 0.1% rng + 0.01% * KHz + 1mV
Current:	
20A Normal:	hi error (Current) = 0.05% hi rdg + 0.1% rng + 0.005% * KHz + 500uA
20A x10 Mode:	hi error (Current) = 0.05% hi rdg + 0.1% rng + 0.01% * KHz + 100uA
30A Normal:	hi error (Current) = 0.05% hi rdg + 0.1% rng + 0.005% * KHz + 1mA
30A x10 Mode:	hi error (Current) = 0.05% hi rdg + 0.1% rng + 0.01% * KHz + 300uA
External Sensor Input:	
	hi error (Voltage) = 0.05% hi rdg + 0.1% rng + 0.005% * KHz + 5uV

Common Mode Rejection	
Total Common Mode and Noise effect on current channels	
Applied 250V @ 50Hz – typical 1mA (150dB)	
Applied 100V @ 100kHz – typical 3mA (130dB)	

Datalog	
Functions	Up to 4 measured functions user selectable (60 with optional PC software)
Datalog window	From 10ms with no gap between each log
Memory	RAM up to 16,000 records

PPA5xx/15xx Start Up Guide

General	
Crest factor	Voltage and Current – 20
Sample rate	Real time no gap - 1Ms/s on all channels
IEC modes	Compliant with IEC62301/EN50564 using internal shunt
Low power accuracy	Refer to low power measurement application note
Remote operation	Full capability, control and data
Application modes	Ballast Inrush Standby Power Calibration

Ports	
RS232	Baud rate to 38400 – RTS/CTS flow control
LAN PPA5xx (option L) PPA15xx (standard)	10/100 Base-T Ethernet auto sensing RJ45
GPIOB (Option G)	IEEE488.2 compatible
USB	USB device – 2.0 and 1.1 compatible
Extension	N4L accessory port
Aux	N4L auxiliary port

Physical	
Display	480 x 272 pixel 4.3" colour TFT
Size	92H x 215W x 312D mm – excluding feet
Weight	3.3kg – 1 phase; 4kg – 3 phase
Safety isolation	1000V rms or dc – category II
Power supply	90-265 rms 50-60Hz 35VA max

Environmental	
Operating Temperature range	0°C to +50°C
Storage Temperature range	-10°C to +60°C
Relative Humidity Range	20 to 95% Non-Condensing
Maximum Altitude	2,000 Metres

* measured fundamental value

10 Comparisons

Model	PPA15xx	PPA45xx	PPA55xx
Item			
USB Port on front	Y	Y	Y
Colour Display	Y	Y	Y
Speed and Torque Standard	N	Y	Y
GPIB, LAN Standard	N	N	Y
IEC61000 Standard	N	N	Y
Current Options	20, 30	10,30,50	10,30,50
Bandwidth	1MHz	2MHz	2MHz
V&I Accuracy	0.05 + 0.1	0.03 + 0.04	0.01 + 0.038
W Accuracy	0.1 + 0.1	0.04 + 0.05	0.03 + 0.03
PWM Mode	N	Y	Y
Transformer Mode	N	Y	Y
Minimum Window Size	2ms	10ms	2ms
Scope	Y	Y	Y
Harm order	50	100 Inter Harm:7500	125 Extended:417 Inter Harm:7500
PWM Filter options	NA	7	7
Internal Datalog	16000 records	16000 records	10M records
Internal logging parameters	4	16	16
TVF 105	N	N	Y
Harm comp/sec	300	600	1800
Range	8	8	9
Internal Memory	192kB	200MB	1GB



Via Acquanera, 29 22100 COMO
tel. 031.526.566 (r.a.) fax 031.507.984
info@calpower.it www.caltower.it